

(UNCLASSIFIED)

NAVSHIPS 92223(A)

NAVSECNO RDIV LIBRARY

INSTRUCTION BOOK

*for*

RADIO TRANSMITTING SET  
AN/FRT-24

COLLINS RADIO COMPANY

Cedar Rapids, Iowa

DEPARTMENT OF THE NAVY

BUREAU OF SHIPS

(UNCLASSIFIED)

Contract: NObsr-57357  
NObsr-71341

Approved by BuShips: 13 July 1954  
Change 1: 26 July 1955  
Change 2: 10 May 1957

## LIST OF EFFECTIVE PAGES

PAGE NUMBERS	CHANGE IN EFFECT	PAGE NUMBERS	CHANGE IN EFFECT
Title page	Change 2	4-1 to 4-10	Original
A	Change 2	5-1 to 5-11	Original
B to C	Original	6-0 to 6-5	Original
i to iv	Original	7-0 to 7-15	Original
v	Change 2	7-16 to 7-17	Change 1
vi	Original	7-18 to 7-34	Original
vii	Change 2	7-35	Change 2
1-0	Change 1	7-36 to 7-38	Original
1-1	Change 2	7-39 to 7-40	Change 2
1-2 to 1-6	Original	7-41 to 7-61	Original
1-7	Change 2	7-62	Change 2
1-8 to 1-9	Original	7-63 to 7-80	Original
2-0 to 2-46	Original	7-81	Change 2
2-47	Change 2	7-82 to 7-86	Original
2-48 to 2-56	Original	7-87 to 7-92	Change 2
2-57	Change 2	7-93 to 7-100	Original
2-58 to 2-72	Original	8-0A to 8-0L	Change 2
3-1 to 3-31	Original	8-1 to 8-131	Change 1
4-0	Change 2	i-1 to i-11	Change 1

## LIST OF ILLUSTRATIONS — Continued

SECTION 7 — CORRECTIVE MAINTENANCE  
(Continued)

<i>Figure</i>	<i>Title</i>	<i>Page</i>
7-8	Telephone Set TA-267 U, Trouble Shooting Chart . . . . .	7-11
7-9	R-F Oscillator O-243/FRT-24, Trouble Shooting Chart . . . . .	7-12
7-10	Power Supply PP-454/FRT-5, Trouble Shooting Chart . . . . .	7-13
7-11	Disassembly of Singleturn Head . . . . .	7-25—7-26
7-12	Disassembly of Control Head . . . . .	7-29—7-30
7-13	Removal of Vacuum Type Capacitor . . . . .	7-28
7-14	Test Setup for Measuring SWR of Transmission Line . . . . .	7-39
7-15	R-F Assembly, Left-Side View, Location of Parts . . . . .	7-53
7-16	R-F Assembly, Right-Side View, Location of Parts . . . . .	7-54
7-17	R-F Assembly, Rear View, Location of Parts . . . . .	7-55
7-18	R-F Output Network, Location of Parts . . . . .	7-56
7-19	Exciter Chassis, Top View, Location of Parts . . . . .	7-57
7-20	Exciter Chassis, Bottom View, Location of Parts . . . . .	7-57
7-21	Crystal Chassis, Location of Crystals . . . . .	7-58
7-22	Keyer Chassis, Top View, Location of Parts . . . . .	7-59
7-23	Keyer Chassis, Bottom View, Location of Parts . . . . .	7-59
7-24	Autotune Assembly, Location of Parts . . . . .	7-60
7-25	Autotune Control Head . . . . .	7-61
7-26	Low-Voltage Power Supply, Bottom View, Location of Parts . . . . .	7-61
7-27	High-Voltage Power Supply, Plate Transformer . . . . .	7-62
7-27A	Step-Start Assembly . . . . .	7-62
7-28	High-Voltage Power Supply, Rectifier Chassis, Bottom View, Location of Parts . . . . .	7-62
7-29	High-Voltage Power Supply, Filter Chassis, Top View, Location of Parts . . . . .	7-63
7-30	High-Voltage Power Supply, Filter Chassis, Bottom View, Location of Parts . . . . .	7-63
7-31	Power Control Assembly, Front Panel, Location of Parts . . . . .	7-64
7-32	Power Control Assembly, Front View, Location of Parts . . . . .	7-64
7-33	Power Control Assembly, Rear View, Location of Parts . . . . .	7-65

SECTION 7 — CORRECTIVE MAINTENANCE  
(Continued)

<i>Figure</i>	<i>Title</i>	<i>Page</i>
7-34	Power Control Assembly, Bottom View, Location of Parts . . . . .	7-65
7-35	Dial Control Assembly, Bottom View, Location of Parts . . . . .	7-66
7-36	Modulator Assembly, Audio Chassis, Top View, Location of Parts . . . . .	7-67
7-37	Modulator Assembly, Audio Chassis Bottom View, Location of Parts . . . . .	7-68
7-38	Modulator Assembly, Modulation Transformer and Filter Chassis Location of Parts . . . . .	7-69
7-39	Power Change Assembly, Top View, Location of Parts . . . . .	7-69
7-40	Power Change Assembly, Bottom View, Location of Parts . . . . .	7-70
7-41	Service Power Supply, Top View, Location of Parts . . . . .	7-70
7-42	Patch Panel Assembly, Rear View, Location of Parts . . . . .	7-71
7-43	Blower Assembly, Location of Parts . . . . .	7-72
7-44	R-F Oscillator O-243/FRT-24, Front Oblique View, Location of Parts . . . . .	7-73
7-45	R-F Oscillator O-243/FRT-24, Case Removed, Top View, Location of Parts . . . . .	7-73
7-46	R-F Oscillator O-243/FRT-24, Case Removed, Bottom View, Location of Parts . . . . .	7-74
7-47	R-F Oscillator O-243/FRT-24, Section A, Location of Parts . . . . .	7-75
7-48	R-F Oscillator O-243/FRT-24, Section B, Location of Parts . . . . .	7-76
7-49	R-F Oscillator O-243/FRT-24, Section C, Location of Parts . . . . .	7-77
7-50	R-F Oscillator O-243/FRT-24, Section D, Location of Parts . . . . .	7-78
7-51	R-F Oscillator O-243/FRT-24, Interpolation Divider, Left-Side View, Location of Parts . . . . .	7-79
7-52	R-F Oscillator O-243/FRT-24, Interpolation Divider, Right-Side View, Location of Parts . . . . .	7-79
7-53	R-F Oscillator O-243/FRT-24, Top View of Dial Gears, Location of Parts . . . . .	7-80
7-54	R-F Oscillator O-243/FRT-24, Front View of Dial Gears, Location of Parts . . . . .	7-80
7-55	R-F Oscillator, O-243/FRT-24, Rear View, Location of Parts . . . . .	7-81
7-56	R-F Oscillator O-243/FRT-24, Coaxial Jumper Cable . . . . .	7-81

## LIST OF ILLUSTRATIONS — Continued

SECTION 7 — CORRECTIVE MAINTENANCE  
(Continued)

<i>Figure</i>	<i>Title</i>	<i>Page</i>
7-57	Power Supply PP-454/FRT-5, Front Oblique View, Location of Parts...	7-82
7-58	Power Supply PP-454/FRT-5, Case Removed, Top View, Location of Parts .....	7-82
7-59	Power Supply PP-454/FRT-5, Case Removed, Bottom View, Location of Parts .....	7-83
7-60	Transmitter Control C-1362/FRT-24, Front Panel Lowered, Location of Parts .....	7-83
7-61	Transmitter Control C-1362/FRT-24, Rear View, Location of Parts.....	7-84
7-62	Transmission Line Coupler CU-390/FRT-24, Location of Parts .....	7-84
7-63	Telephone Set TA-267/U, Location of Parts .....	7-85

SECTION 7 — CORRECTIVE MAINTENANCE  
(Continued)

<i>Figure</i>	<i>Title</i>	<i>Page</i>
7-64	Radio Transmitter T-440/FRT-24, Over-all Schematic Diagram (sheet 1 of 2) .....	7-87—7-88
7-64	Radio Transmitter T-440/FRT-24, Over-all Schematic Diagram (sheet 2 of 2) .....	7-89—7-90
7-65	R-F Oscillator O-243/FRT-24, Over-all Schematic Diagram.....	7-91—7-92
7-66	Power Supply PP-454/FRT-5, Over-all Schematic Diagram .....	7-93—7-94
7-67	Transmitter Control C-1362/FRT-24, Over-all Schematic Diagram.	7-95—7-96
7-68	Transmission Line Coupler CU-390/FRT-24, Over-all Schematic Diagram .....	7-97—7-98
7-69	Telephone Set TA-267/U, Over-all Schematic Diagram .....	7-99—7-100

## LIST OF TABLES

## SECTION 1 — GENERAL DESCRIPTION

<i>Table</i>	<i>Title</i>	<i>Page</i>
1-1	Equipment Supplied . . . . .	1-8
1-2	Equipment Required but Not Supplied . .	1-9
1-3	Shipping Data . . . . .	1-9
1-4	Electron Tube Complement . . . . .	1-9

## SECTION 2 — THEORY OF OPERATION

2-1	Bandswitching Functions of S102 in Multiplier Plate Tank and Frequency Scheme . . . . .	2-11
2-2	Bandswitching Functions of S104 in Amplifier Plate Tank . . . . .	2-14

## SECTION 3 — INSTALLATION

3-1	Wire Sizes . . . . .	3-2
3-2	Cable Assembly Connections . . . . .	3-2
3-3	High-Voltage Power Supply Connections . . . . .	3-8
3-4	Low-Voltage Power Supply Connections . . . . .	3-13
3-5	Blower Assembly Connections . . . . .	3-19
3-6	Power Control Assembly Connections . . . . .	3-19
3-7	Modulator Assembly Connections . . . . .	3-20
3-8	Power Change Assembly Connections . . . . .	3-21
3-9	Service Power Supply Connections . . . . .	3-21
3-10	Power Supply PP-454/FRT-5 Connections . . . . .	3-22
3-11	R-F Oscillator O-243/FRT-24 Connections . . . . .	3-22
3-12	Patch Panel Assembly Connections . . . . .	3-22

## SECTION 4 — OPERATION

4-1	Control Location and Function . . . . .	4-0
4-2	Tuning Chart . . . . .	4-8
4-3	Typical Meter Reading . . . . .	4-9

## SECTION 5 — OPERATORS MAINTENANCE

<i>Table</i>	<i>Title</i>	<i>Page</i>
5-1	Symptoms of Fuse Failure . . . . .	5-4
5-2	Fuse Location . . . . .	5-6
5-3	Replacement of Electron Tubes . . . . .	5-8

## SECTION 6 — PREVENTIVE MAINTENANCE


6-1	Maintenance Schedule . . . . .	6-0
6-2	Lubrication Chart . . . . .	6-3
6-3	Lubricant Federal Standard Stock Numbers . . . . .	6-5

## SECTION 7 — CORRECTIVE MAINTENANCE


7-1	Tube Resistance Measurements . . . . .	7-13
7-2	Tube Operating Voltages . . . . .	7-18
7-3	Exciter Alignment Chart . . . . .	7-32
7-4	Tune-Up Chart for Power Amplifier . . . . .	7-34
7-5	Tube Characteristics . . . . .	7-41
7-6	Winding Data . . . . .	7-43

## SECTION 8 — PARTS LIST


8-4A	Supplementary Table of Replaceable Parts . . . . .	8-0A
8-6A	Supplementary Cross Reference Parts List . . . . .	8-0L
8-1	Weights and Dimensions of Spare Parts Boxes . . . . .	8-1
8-2	Shipping Weights and Dimensions of Spare Parts Boxes . . . . .	8-1
8-3	List of Major Units . . . . .	8-2
8-4	Table of Replaceable Parts . . . . .	8-2
8-5	Maintenance Parts Kit . . . . .	8-120
8-6	Cross Reference Parts List . . . . .	8-121
8-7	Applicable Color Codes and Miscellaneous Data . . . . .	8-130
8-8	List of Manufacturers . . . . .	8-131

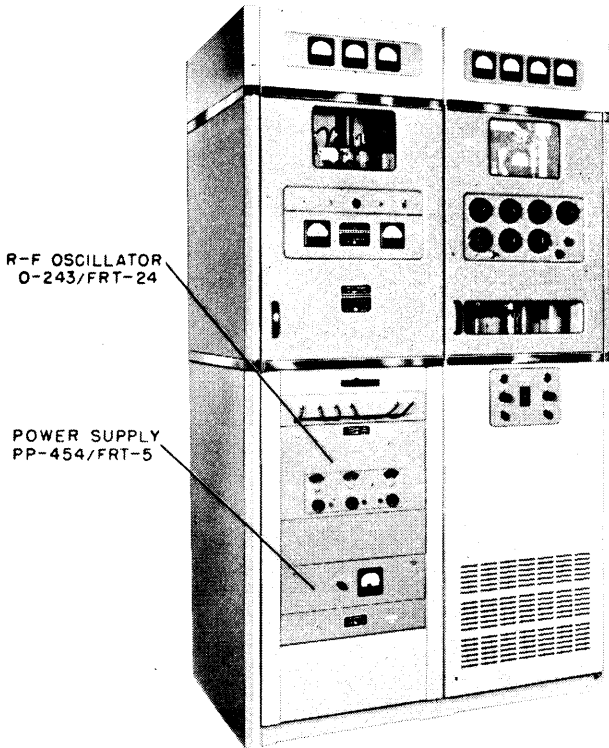


RADIO TRANSMITTER T-440/FRT-24

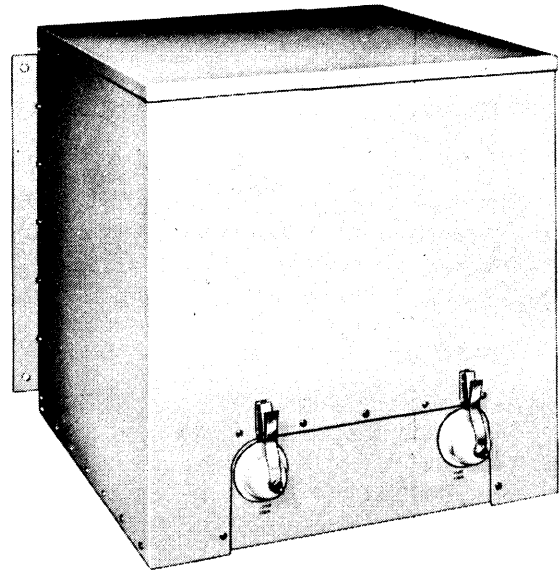


TRANSMISSION LINE COUPLER CU-390/FRT-24

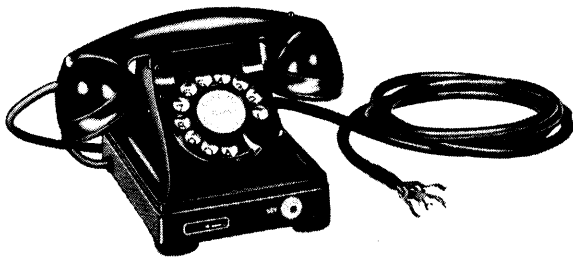


TELEPHONE SET TA-267/U

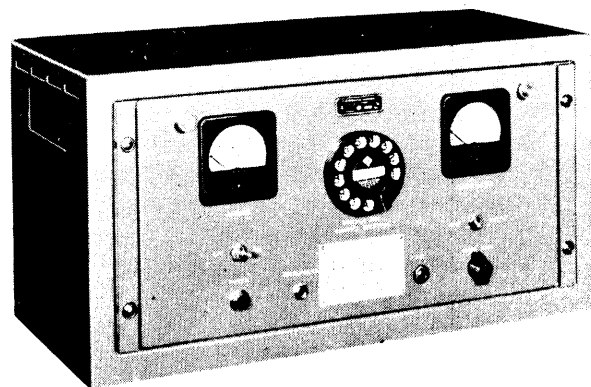

TRANSMITTER CONTROL C-1362/FRT-24

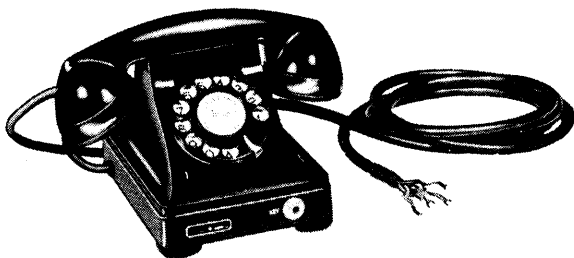

TELEPHONE SET TA-267/U

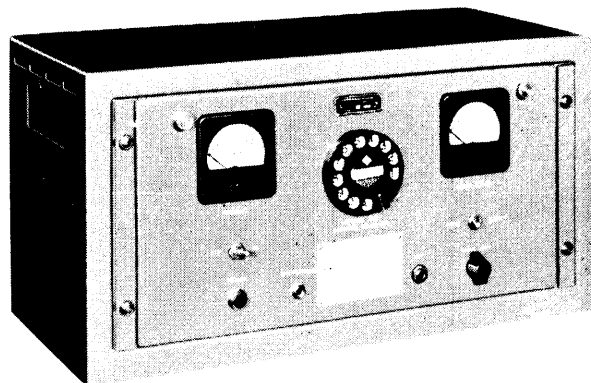

TRANSMITTER CONTROL C-1362/FRT-24

Figur 1-1. Radi Transmitting S t AN/FRT-24, Maj r Units