


**BULLETIN 311B
NAVSHIPS 0967-173-7010
VOLUME 1
(of 2 Volumes)**

**TECHNICAL MANUAL
28 KEYBOARD SEND-RECEIVE (KSR)
AND RECEIVE-ONLY (RO)
TELETYPEWRITER SETS**

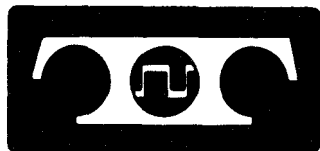

**TELETYPE[®]
CORPORATION
5555 TOUHY AVENUE, SKOKIE, ILLINOIS**

INTRODUCTION

This manual contains two (2) volumes of literature for the 28 Keyboard Send-Receive and the Receive-Only Teletypewriter Sets as follows:

Volume 1, NAVSHIPS 0967-173-7010, provides cross reference material, description and principles of operation, installation, adjustments, lubrication, disassembly and reassembly, and component wiring diagrams.

Volume 2, NAVSHIPS 0967-173-7020, provides parts ordering information.

Each volume is made up of a group of appropriate independent sections. The sections are complete within themselves; they are separately identified by title and section number and the pages of each section are numbered consecutively, independent of other sections.

The identifying number of a section, a 9-digit number, appears at the top of each page of the section, in the left corner of left-hand pages and the right corner of right-hand pages.

To locate specific information, refer to the table of contents. The name of the involved component, the title of the section, and the 9-digit section number may then be found. The sections are arranged in the order shown in the table of contents. Turn to page one of the section indicated where the contents of the section will be found (except where a section is small and does not require a listing of contents).

VOLUME 1

TABLE OF CONTENTS

<u>Title</u>	<u>Contents</u>	<u>Section</u>	<u>Issue</u>
28 Keyboard Send-Receive (KSR) and Receive-Only (RO) Teletypewriter Sets	General Cross		
	Reference Information	573-100-000TC	1
	Description	573-100-100TC	1
	Installation	573-100-200TC	1
	Operating Tests	573-100-500TC	1
	Disassembly & Reassembly	573-100-702TC	1
28 Teletypewriter Enclosures	Description	573-134-100TC	1
28 Electrical Service Unit	Description and Principles of Operation	573-133-100TC	1
28 Teletypewriter Keyboard and Base	Description and Principles of Operation	573-116-100TC	1
28 Typing Unit	Description and Principles of Operation	573-115-100TC	1
Motor Units	Description and Principles of Operation	570-220-100TC	3
LPW300** Paper Winder	Description, Installation, Adjustments, Lubrication, & Principles of Operation	570-301-705TC	1
28 Teletypewriter Cabinets for KSR and RO Sets	Adjustments	573-134-700TC	6
28 Electrical Service Units	Adjustments	573-133-700TC	2
28 Teletypewriter Keyboard and Base (KSR and RO)	Adjustments	573-116-700TC	6
28 Typing Unit	Adjustments	573-115-700TC	7
Motor Units	Adjustments	570-220-700TC	4
28 Teletypewriter Cabinets for KSR and RO Sets	Lubrication	573-134-701TC	3
28 Electrical Service Unit	Lubrication	573-133-701TC	2
28 Teletypewriter Keyboard and Base (KSR and RO)	Lubrication	573-116-701TC	3
28 Typing Unit	Lubrication	573-115-701TC	3
Motor Units	Lubrication	570-220-701TC	4

TABLE OF CONTENTS (continued)

<u>Title</u>	<u>Contents</u>	<u>Section</u>	<u>Issue</u>
28 Teletypewriter Cabinets for KSR and RO Sets	Disassembly & Reassembly	573-134-702TC	2
28 Electrical Service Units	Disassembly & Reassembly	573-133-702TC	2
28 Teletypewriter Base (KSR and RO)	Disassembly & Reassembly	573-116-702TC	2
28 Typing Unit	Disassembly & Reassembly	573-115-702TC	3
28 Keyboard Send-Receive (KSR) and Receive-Only (RO) Teletypewriter Sets for U. S. Navy	Component Wiring Diagrams	573-100-400TC	1