

28F, 28G, 28LA, AND 28LB  
TRANSMITTER-DISTRIBUTOR UNIT  
WIRING DIAGRAM

1. GENERAL

1.01 This section shows the wiring of the 28F, 28G, 28LA, and 28LB transmitter-distributor units. The 28F and 28G units are used with the 28 automatic send-receive set or self-contained transmitter-distributor set. The 28LA and 28LB units are used with the 28 automatic send-receive set only.

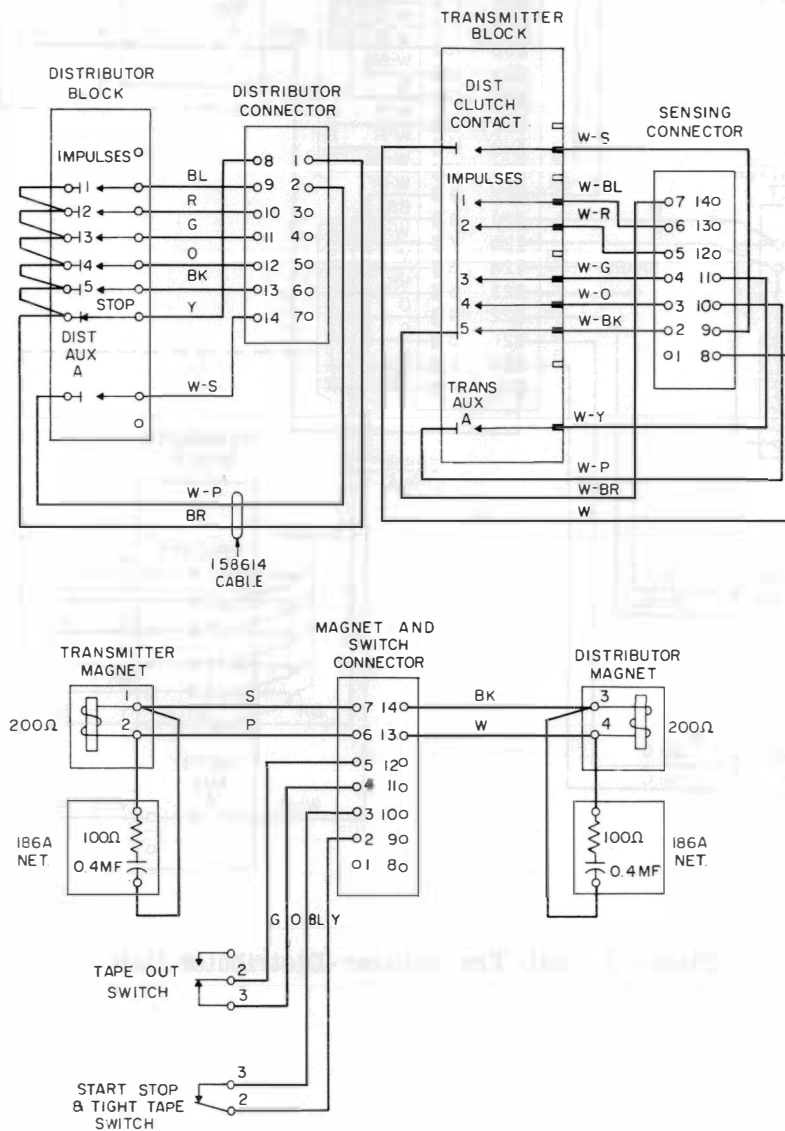


Figure 1 - 28F Transmitter-Distributor Unit

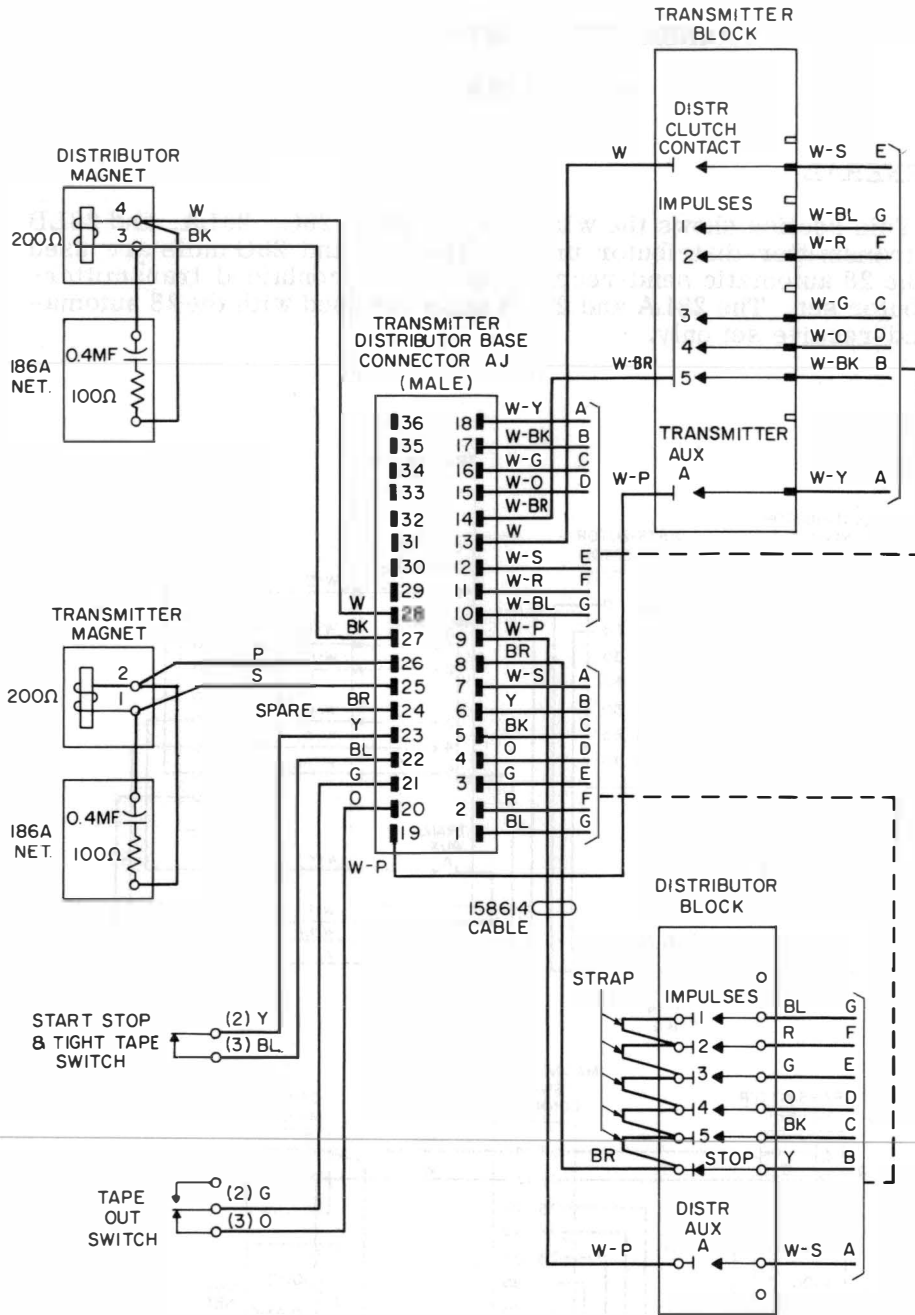


Figure 2 - 28G Transmitter-Distributor Unit

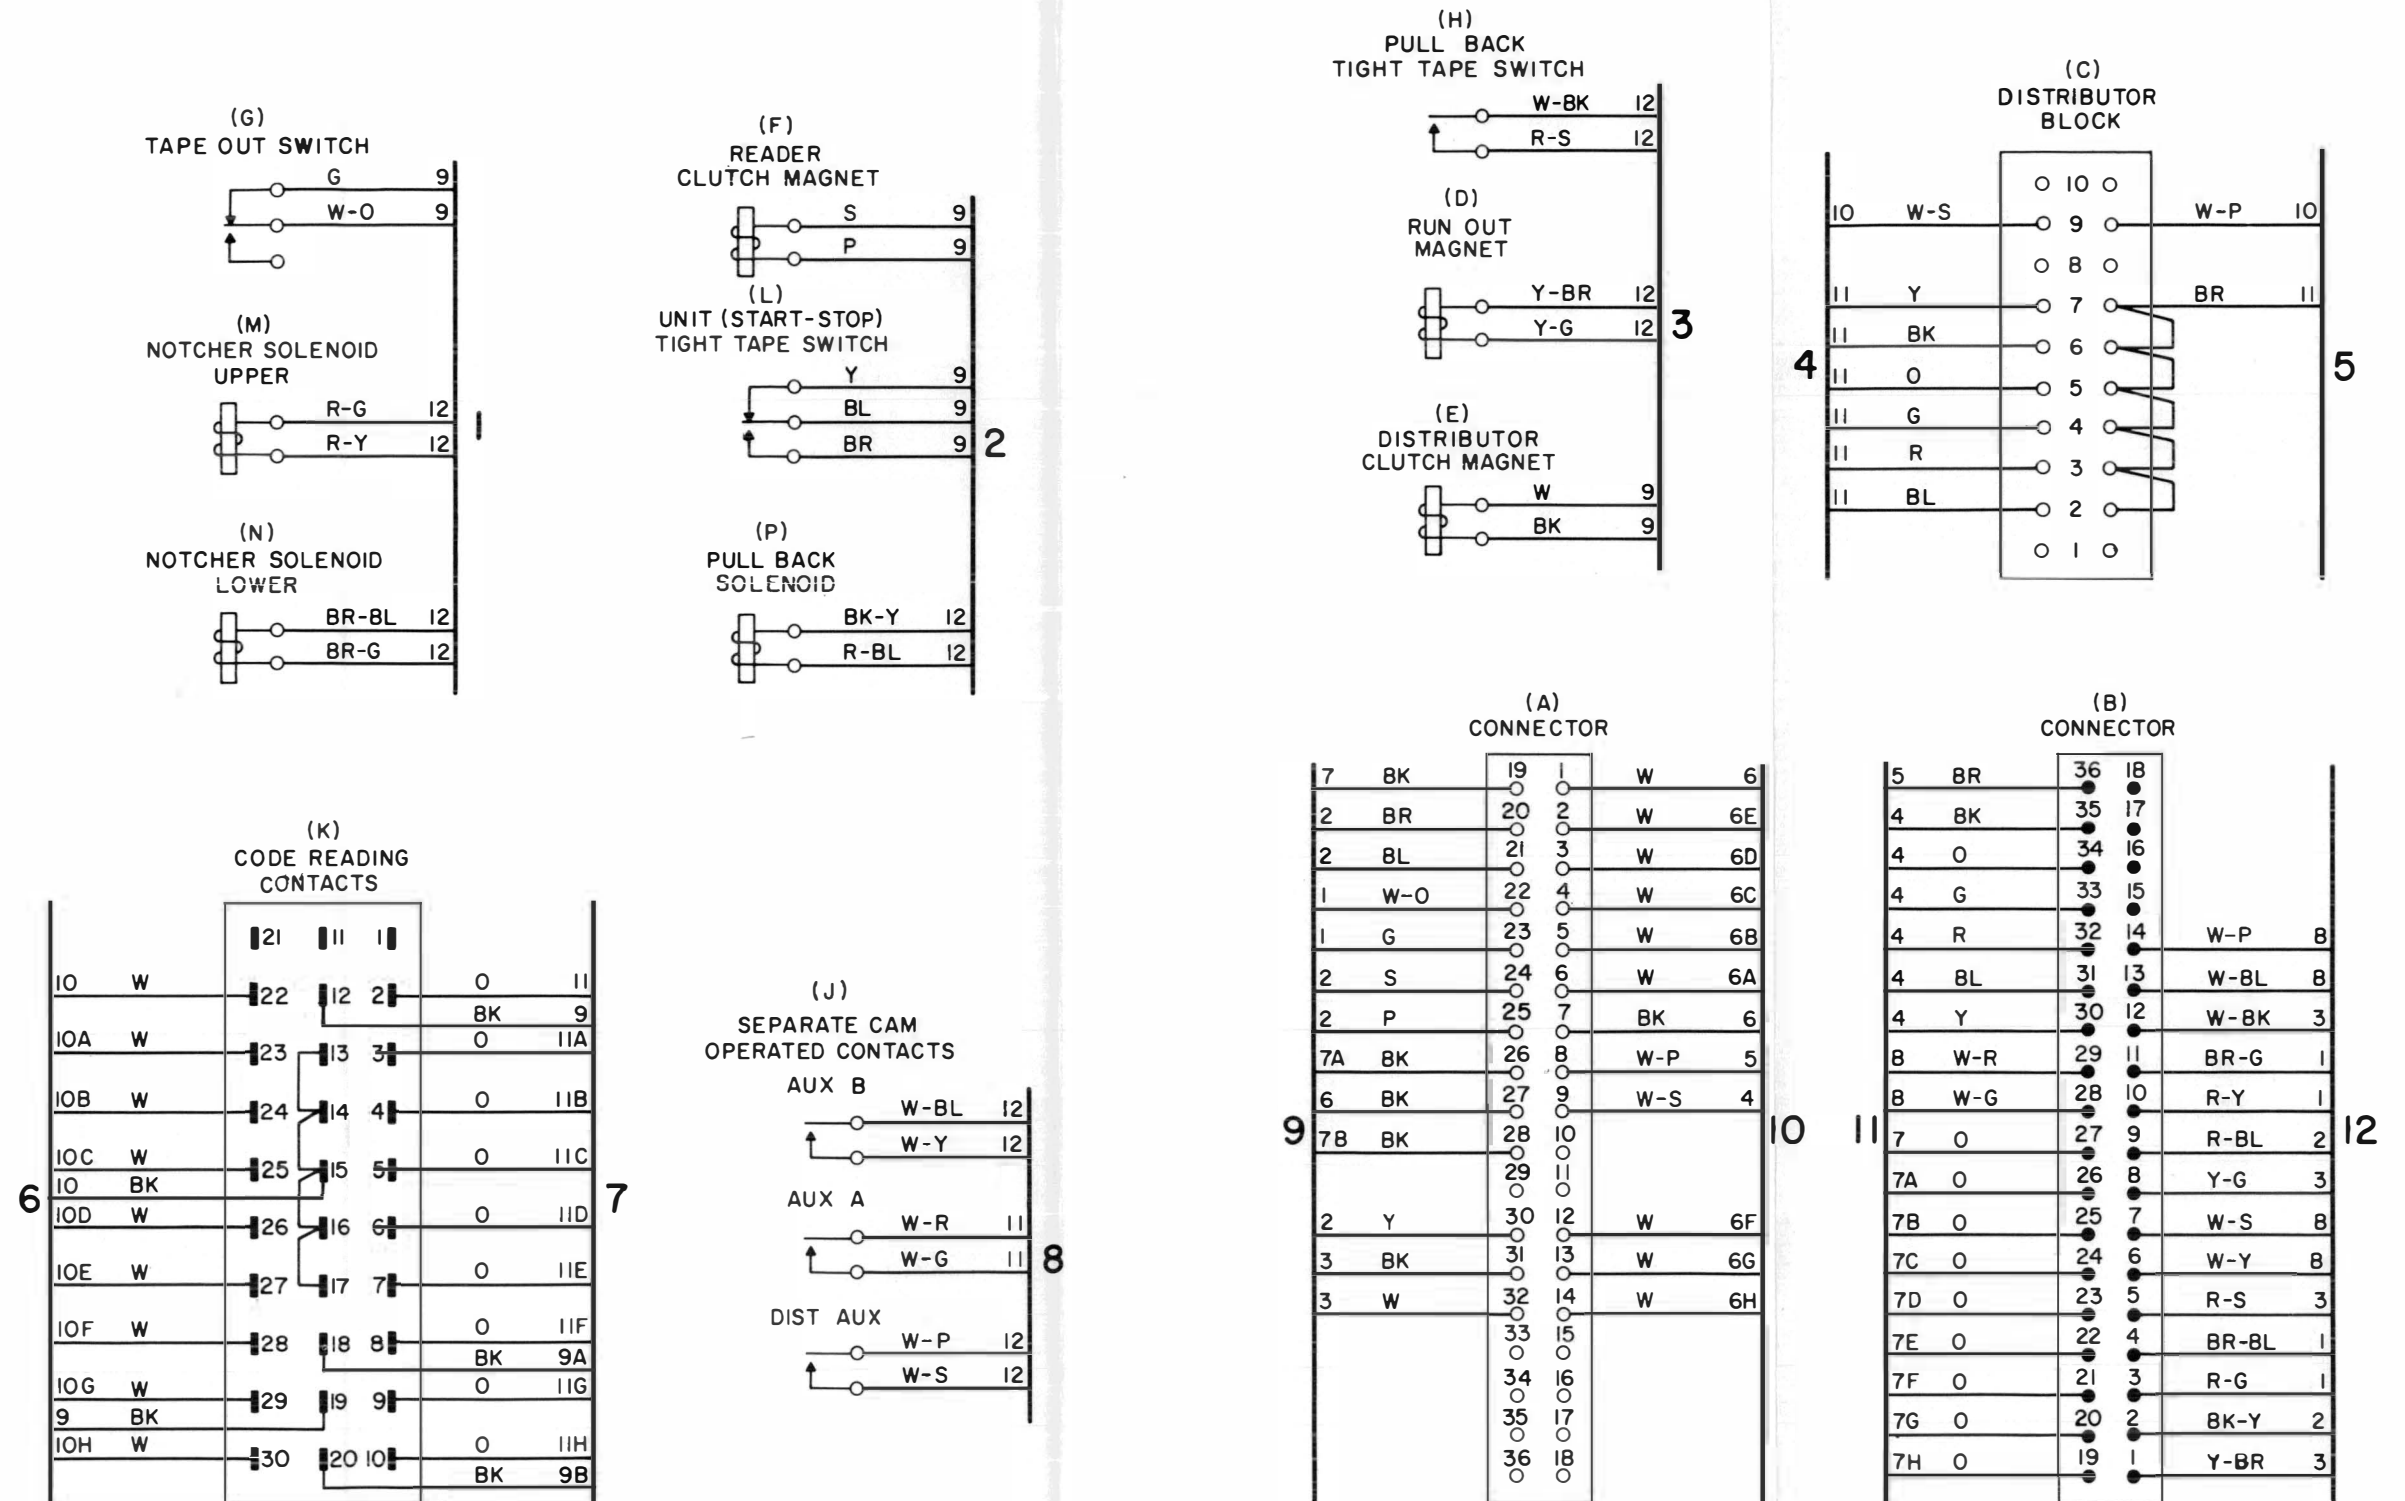


Figure 3 - 28LA Transmitter-Distributor Unit

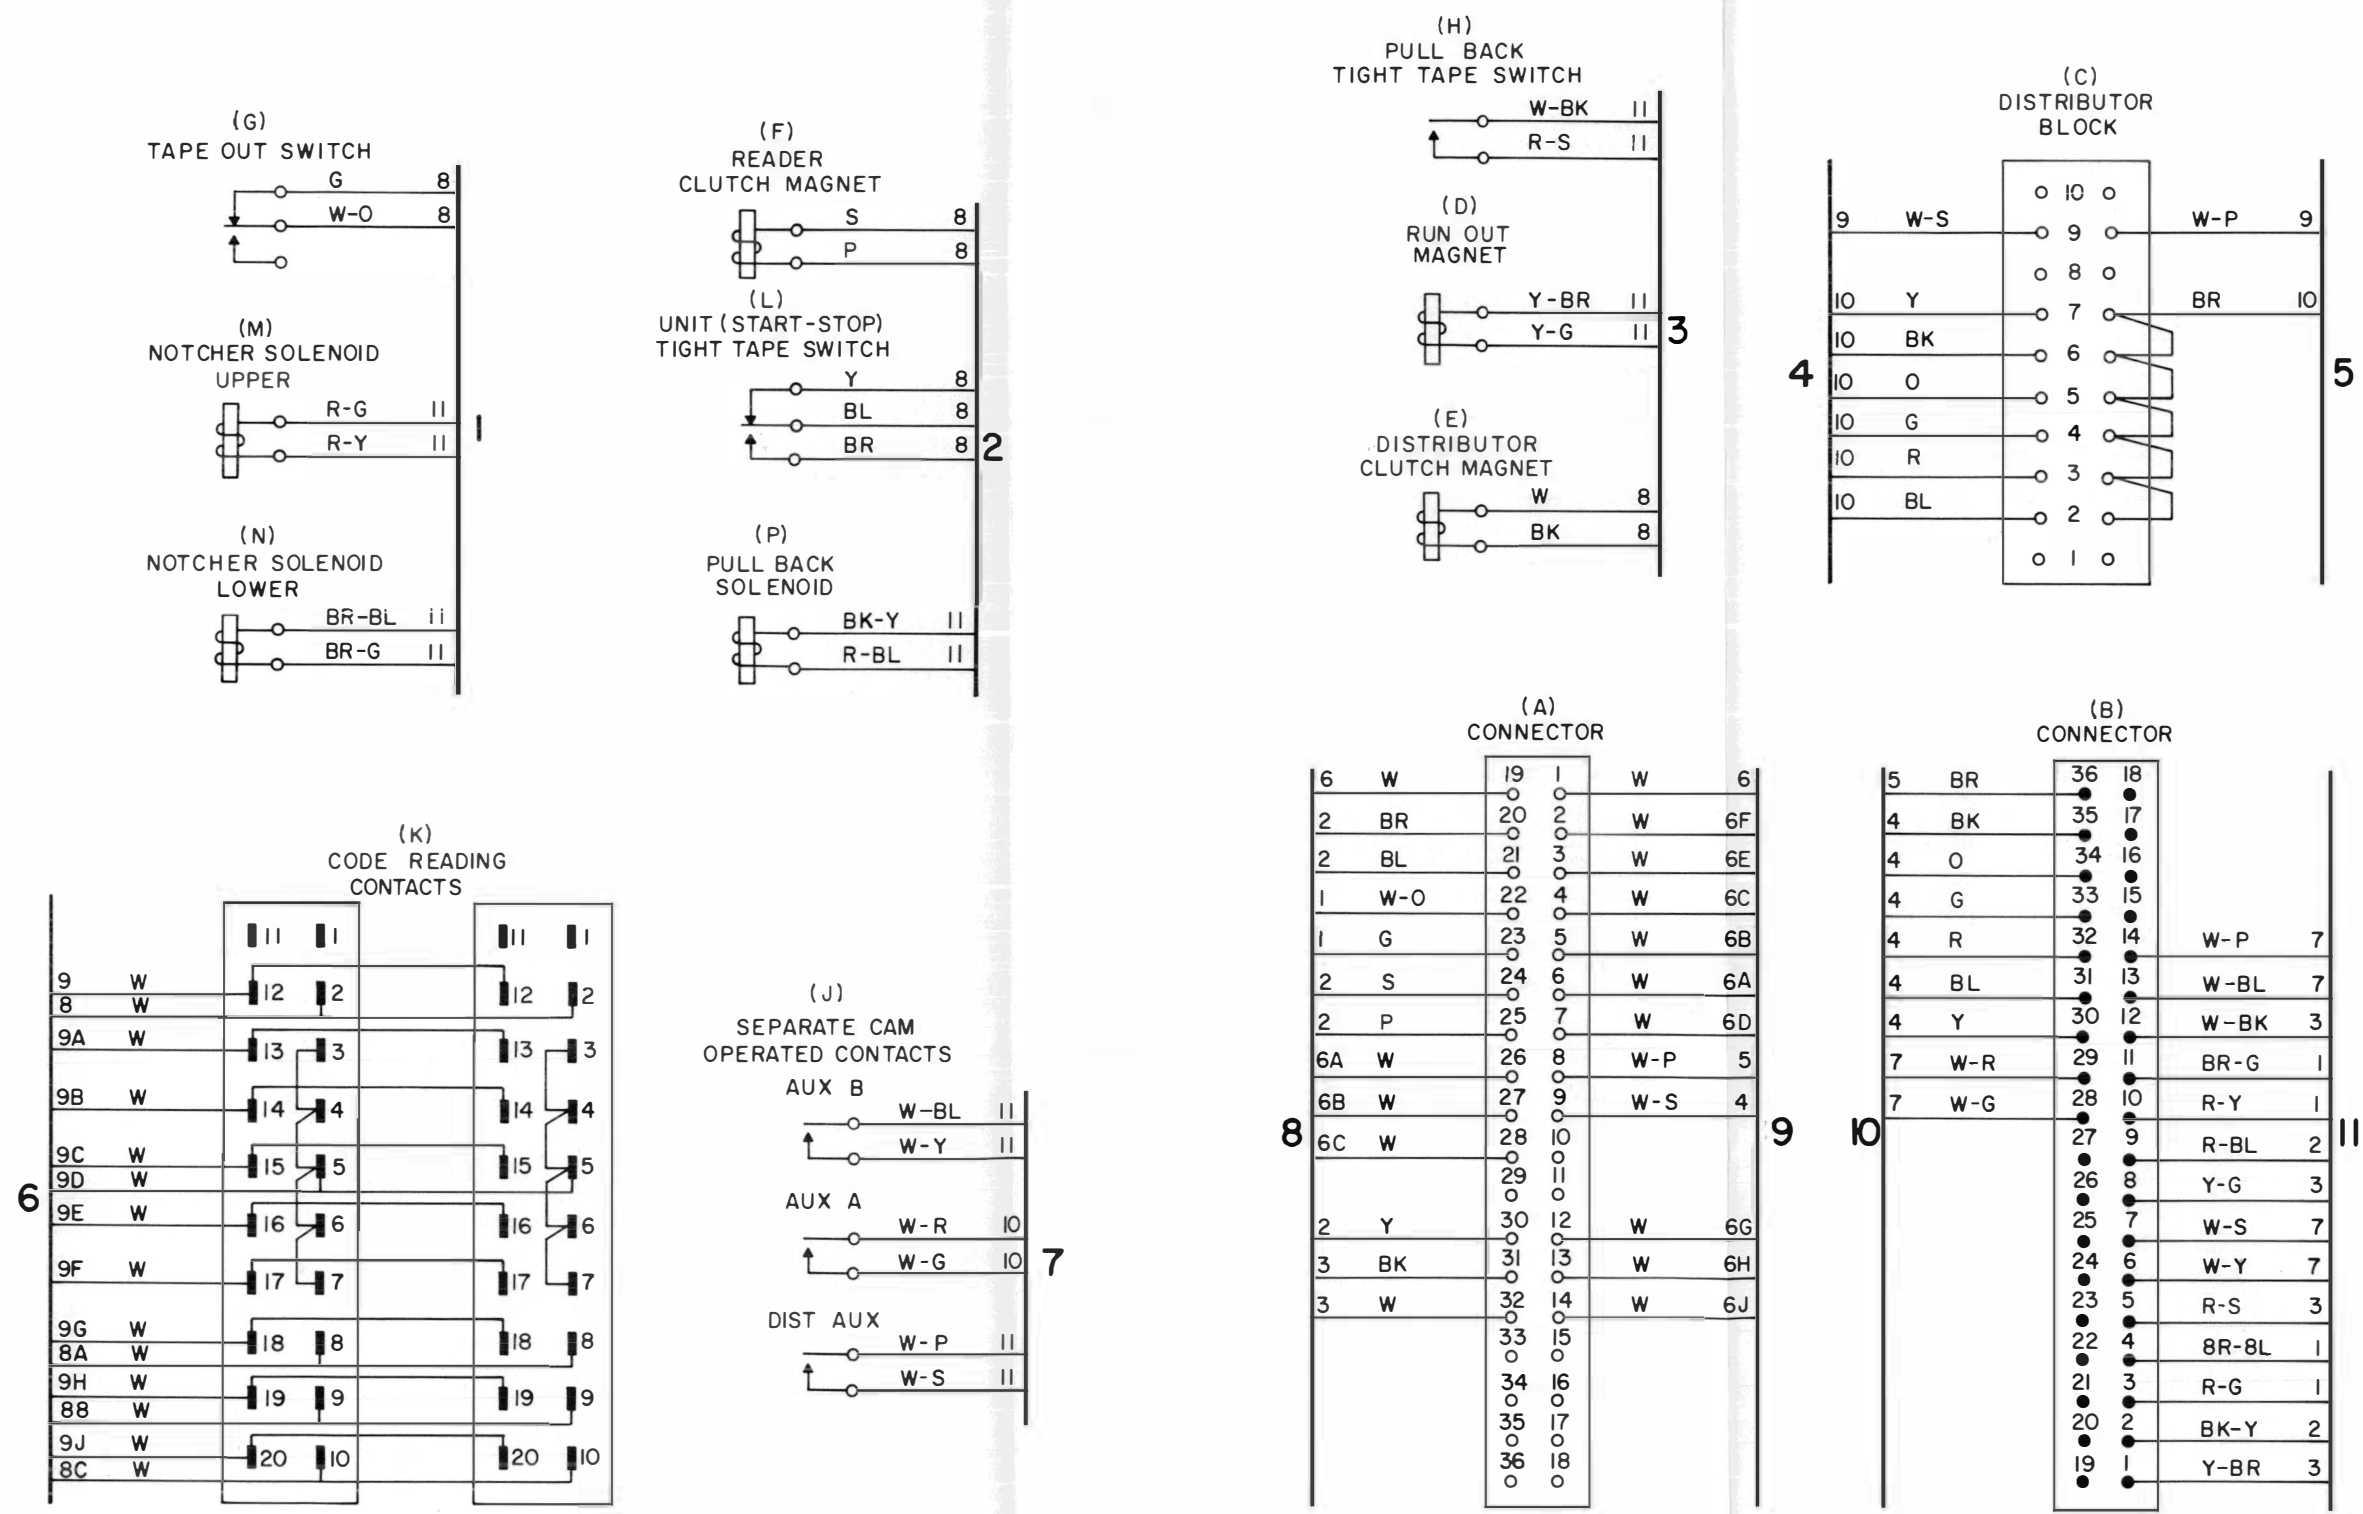


Figure 4 - 28LB Transmitter-Distributor Unit