

43 TELEPRINTER 5-LEVEL PAPER TAPE — TAPE HANDLING AND ENCLOSURES

PARTS

1. GENERAL

1.01 This section provides information on maintenance parts for the tape handling and enclosures.

1.02 Whenever this section is reissued, the reason will be listed in this paragraph.


1.03 Part numbers are listed in the index in numerical order and indicate the page on which the parts appear. Parts are not maintenance

spares but may be ordered separately for local repair of the Paper Tape Unit.

1.04 Disassembly/reassembly information for these parts are covered in Section 574-504-720.

1.05 When ordering replaceable parts or components, unless otherwise specified, prefix each part number with the letters "TP" (ie, TP410055).

2. PARTS

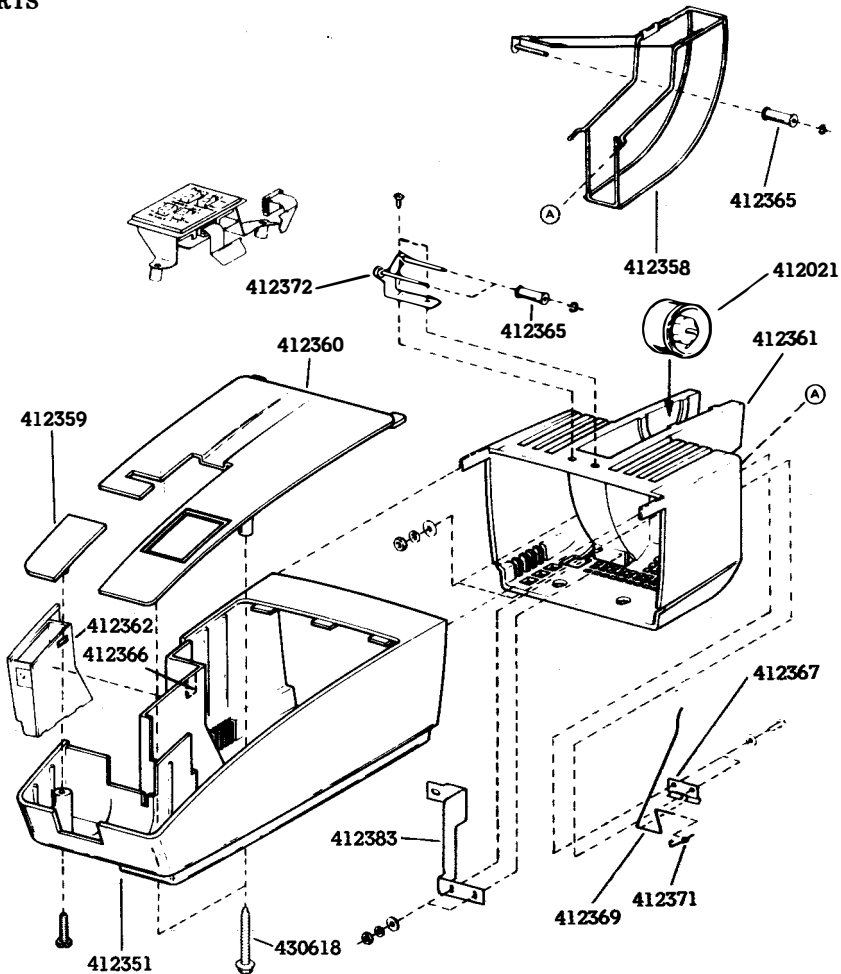

Paper Handling and Enclosures

3. NUMERICAL INDEX

3.01 Parts listed are not maintenance spares but may be ordered as needed for local repair of major components or terminals.

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
412021	Spindle 2	412361	Cover, Bustle 2	412369	Rod, Switch 2
412351	Housing 2	412362	Box, Chad 2	412371	Spring 2
412358	Guard 2	412365	Roller 2	412372	Stand-Off 2
412359	Cover, Wing 2	412366	Strike, Steel 2	412383	Ground Bar 2
412360	Cover, Top 2	412367	Plate 2	430618	Screw, 7-19 Spl 2