

TABLE 6-2. MAINTENANCE PARTS LIST (Cont)

INTERCONNECTION BOX J-1265/U

REF DESIG	NOTES	NAME AND DESCRIPTION	FIG. NO.
4		INTERCONNECTION BOX J-1265/U: Mfr 06845, pn A00081-001 or 666230-075 or 4030664-0501.	1-1
4CR1		SEMICONDUCTOR DEVICE, DIODE: MIL type 1N649.	5-84
4CR2-CR3		SEMICONDUCTOR DEVICE, DIODE: MIL type 1N649, required only when FC3-AN/WRC-1B installed.	
4F1		FUSE: MIL type FO2B125V2AS.	
4J1		CONNECTOR: Mfr 77820, pn 71-74116-5S.	
4J2		CONNECTOR: Mfr 77820, pn PT07A20-41P.	
4J3		CONNECTOR: Mfr 77820, pn PT07A20-39P.	
4J4		CONNECTOR: Mfr 77820, pn PT07A22-55S.	
4J5		CONNECTOR: Mfr 77820, pn PT07A20-39S.	
4K1		RELAY: Hermetically sealed, DPDPT, inductive 5 amp at 32 Vdc, resistive 10 amp at 32 Vdc, mfr 09026, pn BR7X300D5S152.	
4K2-K3		RELAY: Mfr 02289, pn 2B2111, required only when FC 3-AN/ WRC-1B installed.	
4MP1-MP3		SCREW, CAPTIVE: Mfr 06845, pn 666164-260.	
4MP4		STUFFING TUBE: MIL type MS16156-2.	
4MP5-MP6		STUFFING TUBE: MIL type MS16158-5.	
4MP7-MP8		STUFFING TUBE: MIL type MS16157-4.	
4MP9		GASKET: Mfr 06845, pn 666231-294.	
4R1		RESISTOR: MIL type RW65G821.	
4TB1-TB7		TERMINAL BOARD: Mfr 88223, pn 26TB12.	
4XF1		FUSEHOLDER: MIL type FHL18G2-1.	5-84

FILTER BOX ASSEMBLY

4A6		FILTER BOX ASSEMBLY: Mfr 06845, pn 666235-278 or 4030728-0501.	5-84
4A6FL1-FL2		FILTER, RF: Mfr 56289, pn 5JX94.	5-84